
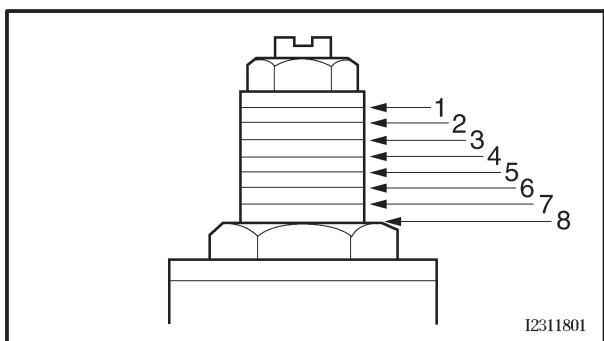


ADJUSTING THE FRONT FORK LEGS

CHK
ADJ

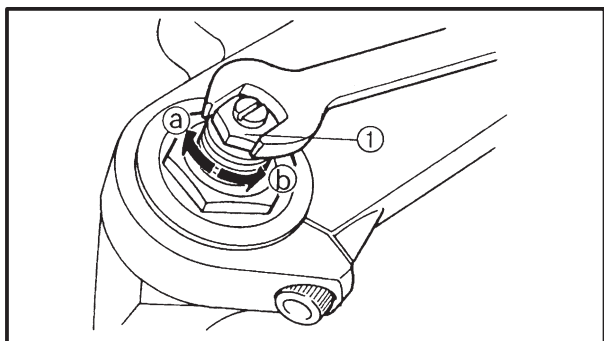

I2311801

1. Adjust:
 - spring preload

a. Turn the adjusting bolt (1) in direction (a) or (b).

Direction (a)	Spring preload is increased (suspension is harder).
Direction (b)	Spring preload is decreased (suspension is softer).

Adjusting positions
Standard: 4
Minimum: 8
Maximum: 1


Rebound damping

CAUTION:

Never go beyond the maximum or minimum adjustment positions.

1. Adjust:
 - rebound damping

a. Turn the adjusting screw (1) in direction (a) or (b).

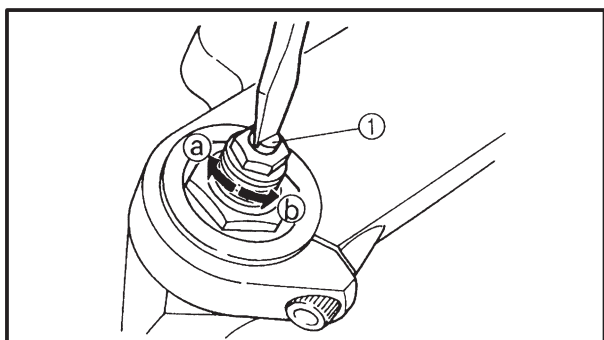

Direction (a)	Rebound damping is increased (suspension is harder).
Direction (b)	Rebound damping is decreased (suspension is softer).

Adjusting positions
Standard: 7 clicks out*
Minimum: 17 clicks out*
Maximum: 1 clicks out*

*: from the fully turned-in position